



“Victory” Trigger for Ruger PC Carbine Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com

Attention:

Before you begin be certain that the magazine is clear and safe. You will need a 5/32” allen wrench for removing screws in nylon stock. You may also need a thin punch.

1. Pull the bolt back, then press the metal tab right in front of the trigger guard to lock it back. Pull the lever at the front end of the stock towards the front of the gun. This will allow the barrel to twist off.



2. Loosen the two stock screws using a 5/32” allen wrench. One is in front of the mag well, one is behind the trigger guard. The screws are captive and do not need to be removed all the way. Just loosen enough so that receiver can be separated from stock. Be aware that the dowel pins that hold in the trigger housing have a tendency to fall out thus this procedure is best done in a controlled environment.



3. Push two dowel pins out of receiver to release trigger housing using allen wrench. Drop trigger housing from receiver. Release hammer from sear by turning off safety and pulling trigger. Control the drop of hammer using other hand. Remove main spring sub-assembly.



4. With the hammer disengaged from the sear, the hammer pin can easily be pushed out of the trigger housing. Remove hammer.

5. Remove trigger sub-assembly pivot pin. Remove trigger sub-assembly. The trigger return spring and plunger can stay in the trigger housing.



6. Remove 3/32” pin from trigger to release disconnecter, sear, and sear spring. Take care not to misplace sear spring. Replacement sear springs are available from TandemKross.

7. Set the small spring into the counterbore on top of the sear, then put the other end into the counterbore on the bottom of the disconnecter, and push them together until the disconnecter hooks onto the sear. Spring tension will hold them together.



