

“Cornerstone” for SW22® Victory™
Installation Instructions
V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com

Attention:

Before you begin be certain that the magazine is clear and safe. You will need a 3/32" allen wrench, a 1/8" allen wrench, and forceps or needle nose pliers.

1. Unscrew the takedown screw in front of the trigger guard using the 1/8" allen wrench. Separate upper from lower portion of firearm.



2. Remove your grip using the 3/32" allen wrench.



3. Remove the magazine catch, magazine catch spring and bolt stop plate if it is not already out.



4. Place the safety down in the off position and release the hammer by pulling the trigger. The magazine disconnect will need to be pushed up manually or an empty magazine can be inserted so that the trigger will release the hammer. The main spring will be applying no force to the hammer in this position.



