



KELTEC PMR-30 Maverick Magazine Bumper (Base Pad) Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com


Attention:

Before you begin be certain that the gun and magazine is clear and safe. You will need a small punch, allen wrench, or awl for the installation process. Be cautious of the spring and wear safety glasses.

1. Remove the magazine from the magwell and clear the magazine of any rounds. Holding the magazine so that the bottom faces up, you should see the plunger.




2. Using an Allen wrench, or a similar tool, lightly depress the plunger.

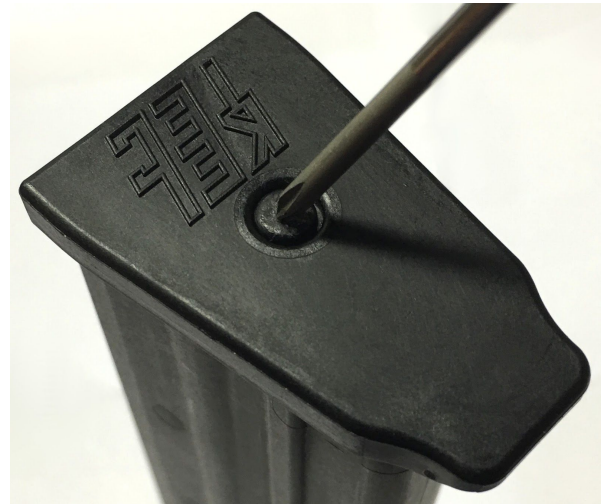

3. While the plunger is depressed, grip the base plate with your hand and slide it off the magazine base. Be mindful of the spring and keep it depressed with your thumb if able.



4. If unable to keep the spring depressed, you should be able to push it back in by pressing down on the plunger.

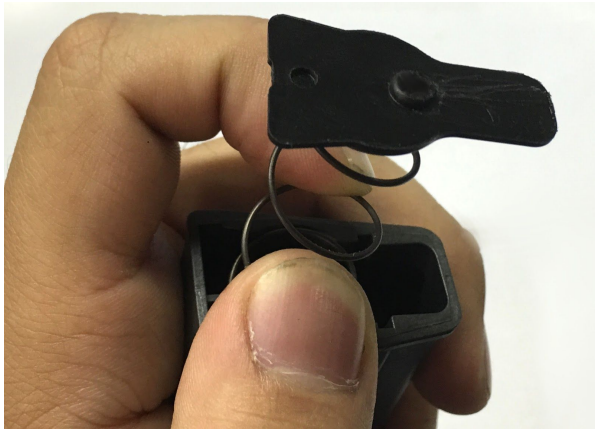

5. Slide the Maverick opening over the opening of the magazine. It should be a tight fit.

6. With the base pad in position, apply firm pressure with your thumb to ensure it is seated properly. You should hear a soft click and the plunger should be visible through the hole of the base pad.

